


HARD WIRED REMOTE CONTROL INTERFACE  
Adaptateur commande au volant / Stuurafstandsbediening / Lenkradbedienung

Car:



**Mazda**  
**6 2007>**  
**For Bose amplified systems**

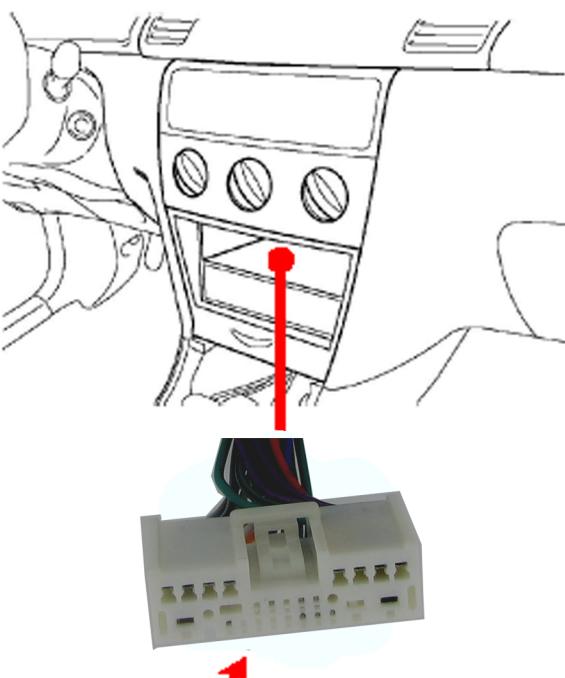


Tools/Tools/Gereedschap/Werkzeug:





**Phillips**

1. Blue Wire (Bleu) -  
Amplifier Remote (Extérieur d'amplificateur)

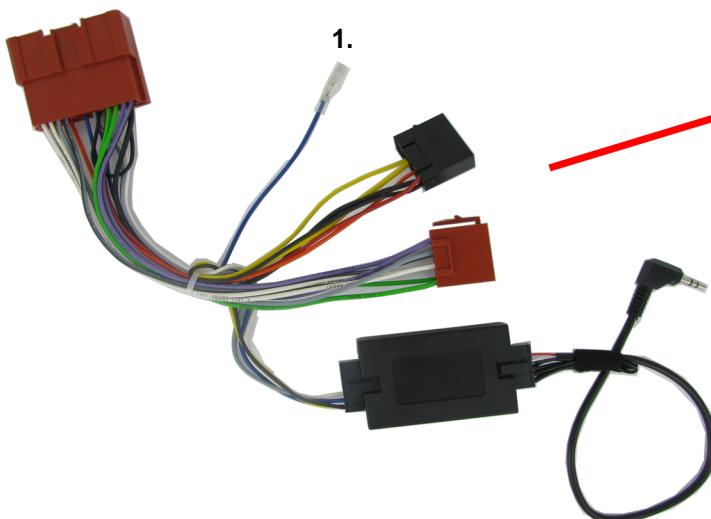

lock	Front view	ISO power connector:
		2 4 6 8
		1 3 5 7
A1 = Speed Signal - Blue/Black Wire		
Impulsion de Vitesse - Bleu/Noir		
A2 = Reverse Gear - Purple Wire		
Marche arrière - Violet		
A3 = Not Connected		
Non relié		
A4 = +12 Volts - Yellow Wire		
+12 Volts - Jaune		
A5 = Antenna Remote		
Extérieur d'antenne		
A6 = Illumination - Orange Wire		
Illumination - Orange		
A7 = Ignition - Red Wire		
Ignition - Rouge		
A8 = Ground - Brown Wire		
La terre - Brun		

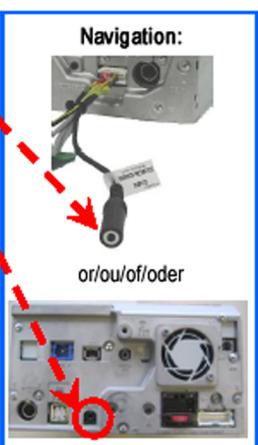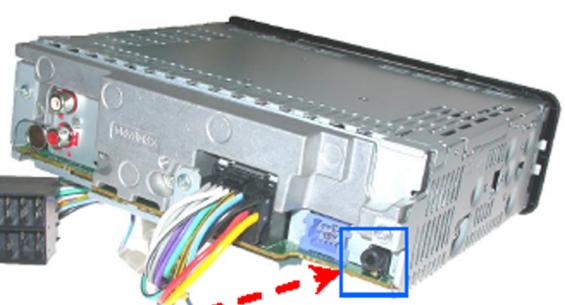

Autoradio:

## User Guide



### To Adjust Clock:

1. Press and hold SET button for 2 seconds.
2. Press up to increment the hour.
3. Press down to increment the minute.
4. Press and hold SET button to exit or wait for 10 seconds.

### To Navigate Trip Computer:

1. Press the RIGHT arrow repeatedly until the clock in the vehicle display is highlighted.
2. Use the UP and DOWN keys to navigate the trip computer.

### To Reset Trip Computer

1. Navigate to trip computer setting you wish to reset (as shown above)
2. Press and hold 'SET' until the reading clears. The display should show '---'